WEILAND
INDUSTRIAL DOORS & WINDOWS

HEAVY DUTY
SPRING TENSION BARREL CLOSER
ADJUSTMENT INSTRUCTIONS

Please follow the below instructions for a quality installation of your door closer.

STEP 1:	Remove the cap nut and lock washer from the bolt that secures the arm to the arm guide assembly.
STEP 2:	Remove the cover over the pivot point that covers the tensioning gear.
STEP 3:	Pull closer arm open and look for winding pawl under arm.
STEP 4:	Engage the winding pawl with the gear to keep current preload on spring.
STEP 5:	Pull the gear stop pin on the closer arm. Rotate the arm back toward the door. *(You may need a set of plyers to pull out the pin.)*
STEP 6:	Re-engage gear stop pin with gear and undo winding pawl. *(Caution: arm will be under tension.)*
STEP 7:	Repeat above steps until desired tension has been reached.
STEP 8:	Once desired tension is reached, place arm back in arm guide assembly and replace bolt, lock washer and cap nut.
STEP 9:	Replace pivot cover.

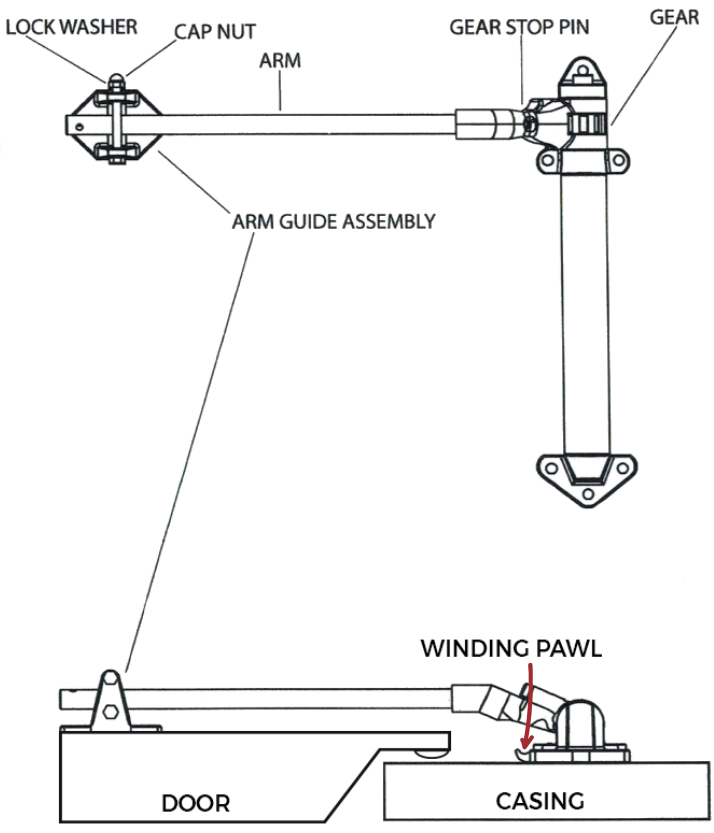

Note: These steps can be completed by opening and closing the door when using the winding pawl & pin to tighten.